

4WP Series Installation Instructions

• Swing Out Unit (25" tall version shown)



Contents

- 1- Pantry Unit with Piano Hinge
- 1- Magnetic Catch and Strike Plate
- 4- Wire Fence pieces for top shelf (if needed)
- 8 - Wood plugs for top shelf (if wire fence is not used)
- 2- 1/4" spacers
- 1- Screw pack

Items needed for installation

- Phillips Head Screw Driver
- 3/4" wood spacer

 
Note: If adequate clearance is available, install top shelf wire fencing. If clearance is not available install wood plugs into holes

Step 1. Set Swing Out unit in cabinet with 3/4" spacer underneath for floor clearance.

Step 2. Swing Piano Hinge around to inside of cabinet where unit is to be installed.

Step 3. Place the 1/4" spacers between unit and center divider of cabinet. One at top and bottom of unit

Top View

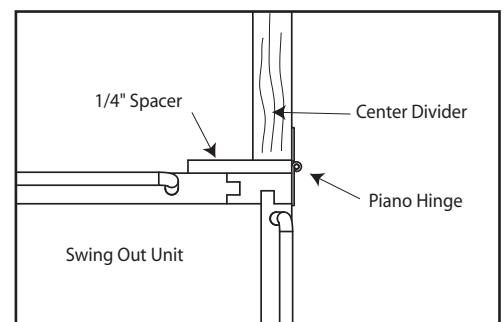


4WP Series Installation Instructions

• Swing Out Unit



 Step 4. Screw Piano Hinge into cabinet using screws that came packaged with hinge & install magnetic catch and strike plate using screws provided then remove and discard spacers.

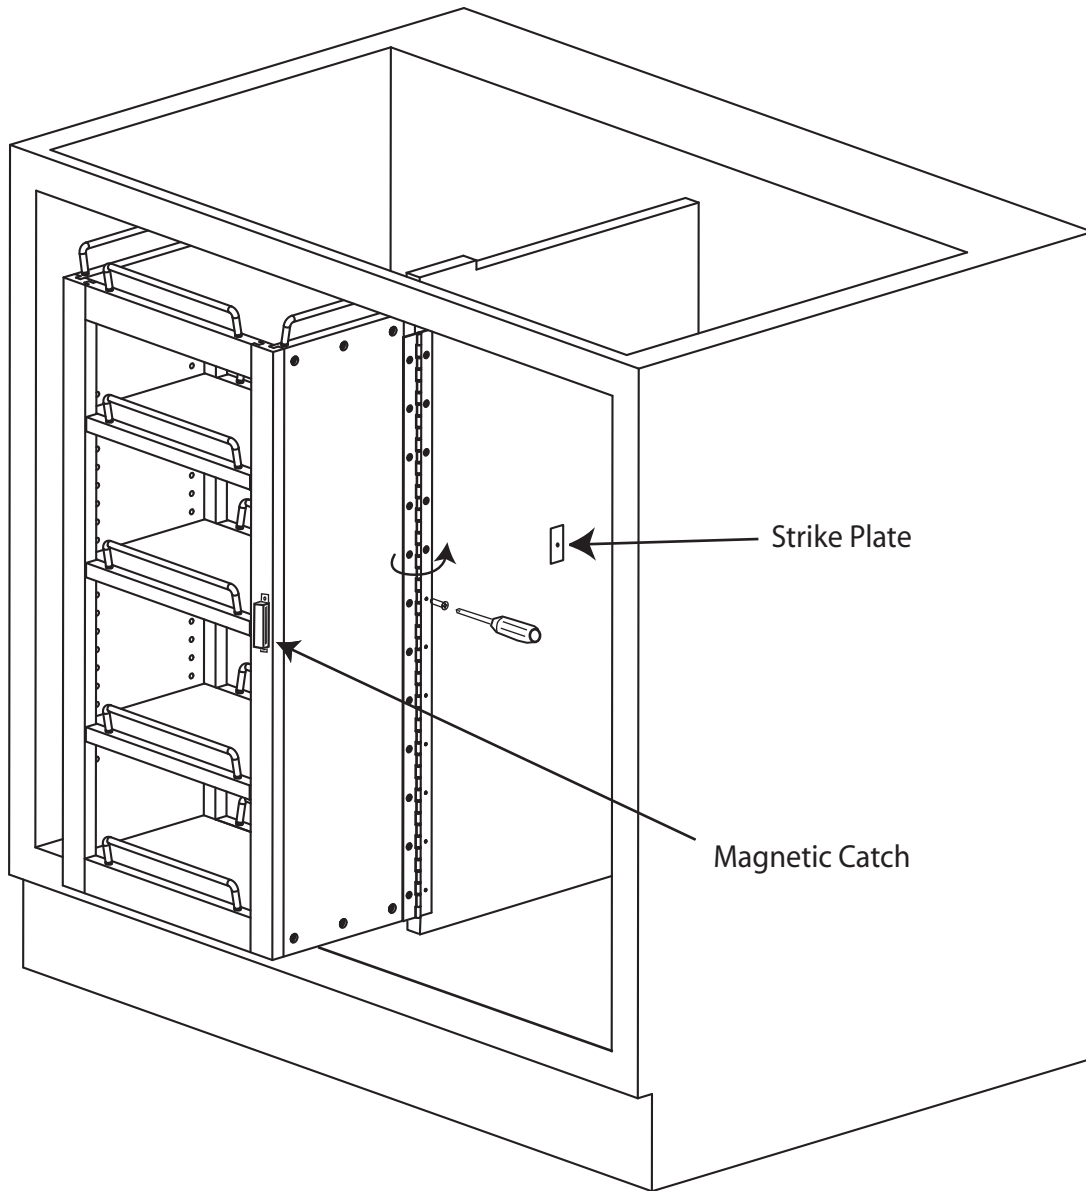

Questions? Call our Customer Service Specialist at
800-626-1126 or visit us online at www.rev-a-shelf.com



2409 Plantside Drive
Jeffersontown, KY 40299